

**Dear customer:**

Thank you for buying this refrigerator-freezer. To ensure that you get the best results from your new refrigerator-freezer, please take time to read through the simple instructions in this booklet.

Please ensure that the packing material is disposed of in accordance with the current environmental requirements.

When disposing of any refrigerator-freezer equipment please contact your local waste disposal department for advice on safe disposal.

This appliance must be only used for its intended purpose.

**CAUTION :**

The appliance is not intended for use by young children or infirm persons without supervision.

Young children should be supervised to ensure that they do not play with the appliance.

**General:**

This type of refrigerator-freezer is widely used in places such as hotels ,offices, student dormitories and houses. It is mostly suitable for refrigerating and preserving foods such as fruits and beverage. It enjoys the advantages of small size, Lightweight, Low electric consumption and easy use.




euro  
*Refrigeration*

## USE AND CARE GUIDE

MODEL NO.: E292FW  
E292FSX

## Main configuration:

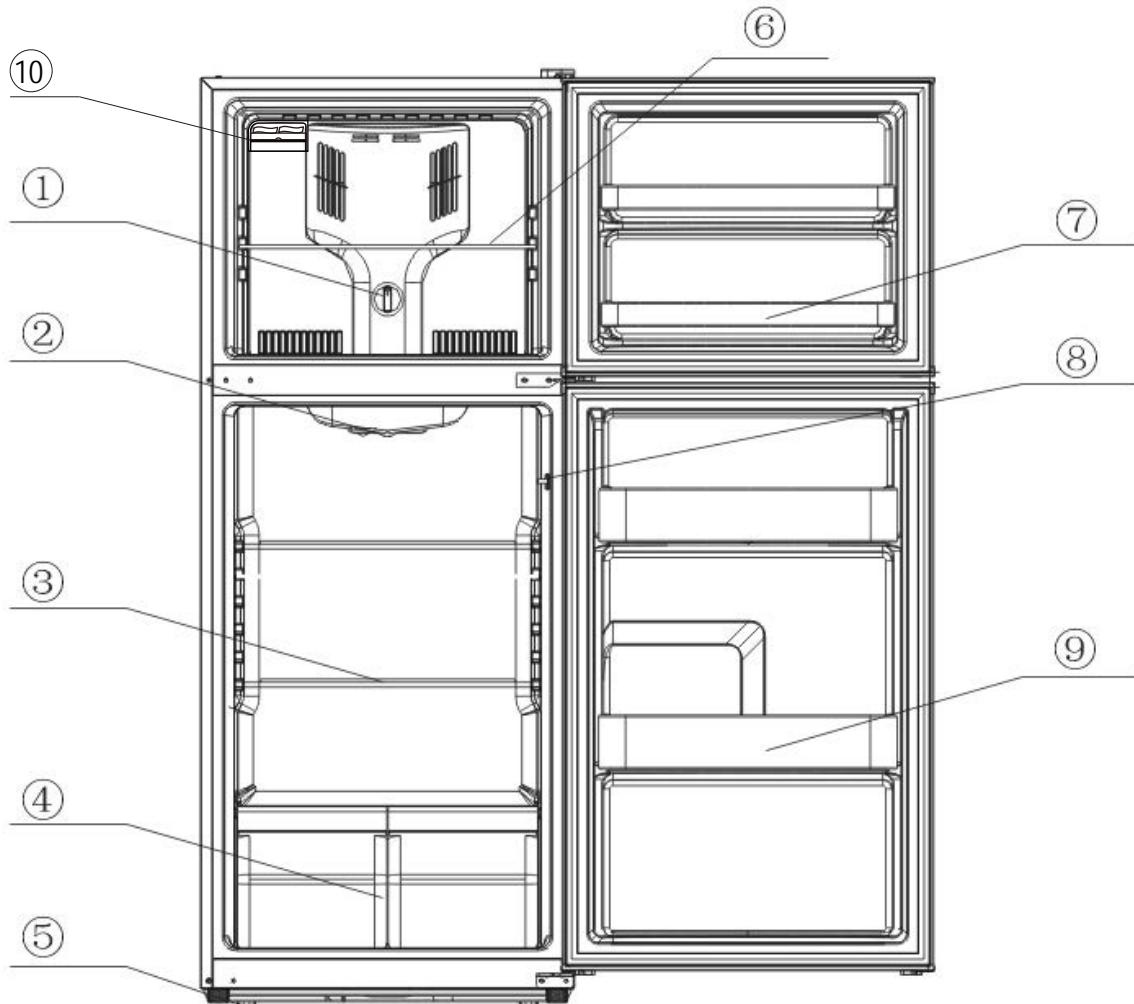

- 1、Thermostat**
- 2、Refrigerator lamp**
- 3、Refrigerator shelf**
- 4、Crisper**(The crisper contains ice tray and manual)
- 5、Adjustable foot**
- 6、Freezer shelf**
- 7、Freezer tray**
- 8、lamp switch**
- 9、Refrigerator tray**
- 10、Ice maker**

## **UNPACKING YOUR REFRIGERATOR-FREEZER**

**WARNING: Use two or more people to move refrigerator-freezer. Failure to do so can result in back or other injury.**

Remove tape and any labels from your refrigerator-freezer before using(except the rating label).

To remove any remaining tape or glue, rub the area briskly with your thumb.

Tape or glue residue can also be easily removed by rubbing a small amount of liquid dish soap over the adhesive with your fingers. Wipe with warm water and dry.

Do not use sharp instruments, rubbing alcohol, flammable fluids, or abrasive cleaners to remove tape or glue. These products can damage the surface of your refrigerator-freezer.

When moving the refrigerator-freezer, do not tilt the refrigerator-freezer beyond 45°from upright position.

### **CLEANING BEFORE USE:**

After you remove all of the packaging materials, (especially the foam between outside condenser and cabinet should be removed) clean the inside of your refrigerator-freezer before using it.

### **SPACE REQUIREMENTS**

**WARNING: Keep flammable materials and vapors, such as gasoline, away from refrigerator-freezer.**


Failure to do so can result in death, explosion, fire or burns.

To ensure proper ventilation for your refrigerator-freezer, allow for 200mm space

on each side between walls, 200mm space between back of your refrigerator-freezer and the wall, and 300mm space between counter top and the roof or ceiling.

If you are installing your refrigerator-freezer next to a fixed wall, leave sufficient space on the hinge side to allow for the door to swing open.

Never install your refrigerator-freezer near heat source and direct sun shins.

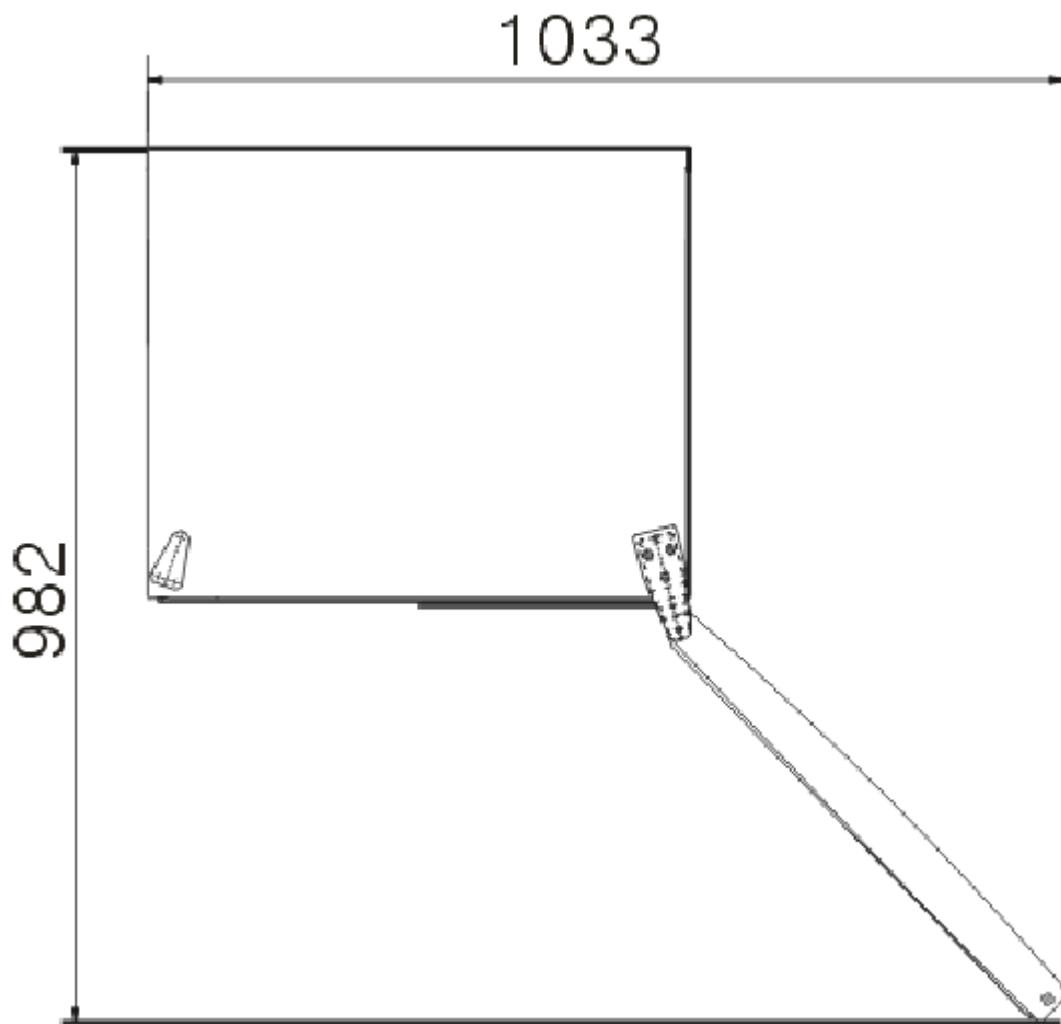

## **ELECTRICAL REQUIREMENT**

**WARNING: DO NOT REMOVE GROUND PRONG.**

**DO NOT USE AN ADAPTOR.**

**DO NOT USE EXTENSION CORD.**

Failure to follow these instructions can result in death, fire or electrical shock.

Before you move your refrigerator-freezer into its final location, it is important to make sure you have the proper electrical connection.

### **Recommended Earthing Method**

AC220~240Volt /50Hz, AC only 10 ampere fused and properly earthed electrical supply is required. It is recommended that a separate circuit serving only this appliance be provided. Use a receptacle which cannot be turned off with a switch or pull chain. Do not use an extension cord.

**NOTE:** Before performing any type of installation, disconnect the refrigerator-freezer from the electrical source. When you are finished, connect the refrigerator-freezer to the electrical source and reset the control to the desired setting.

## **LEVELING**

If the refrigerator-freezer is not leveled during installation. The doors may not close or seal properly, causing cooling, frost, or moisture problems. It is very important of the refrigerator-freezer to be level in order to function properly.

To level your refrigerator-freezer you may either turn the adjustable foot clockwise to raise that side to the refrigerator-freezer or turn counter – clockwise to lower that side.

**NOTE:** Having someone push against the top of the refrigerator-freezer, take some weight off. This makes it easier to adjust the adjustable foot.


## USE OF THE APPLIANCE

To obtain the best possible results from your refrigerator-freezer, it is important that you operate it properly.

### Temperature Control

The temperature in the refrigerator-freezer is controlled by the thermostat control knob.

The thermostat control box is located in the refrigerator compartment.

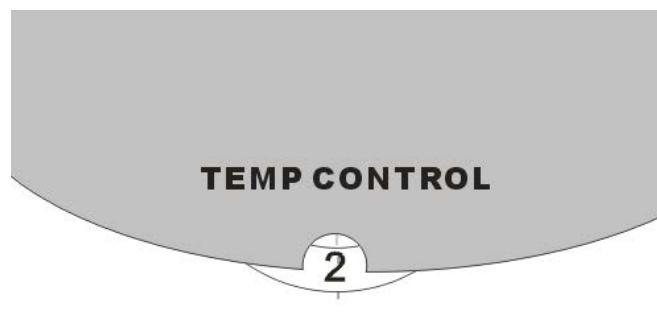

Turn the thermostat control knob up or down to regulate the temperature inside the refrigerator-freezer. The markings on the control knob indicate the "1~7" for the different temperature grades. The temperature decreases with position "1" being the warmest and position "7" being the coldest.

Set the control to position between "1" and "7" for normal use, the exact position is beyond the temperature in the refrigerator-freezer, generally, choose the number "3".

### Fresh Food Storage

Wrap or store food in the refrigerator in airtight and moisture-proof material.

This prevents food odor and taste transfer throughout the refrigerator.

- Fruit – wash, let dry and store in refrigerator in plastic bags or crisper.
- Leafy vegetables- Remove wrapping and trim or tear off bruised and discolored areas, wash in cold water and drain. Place in plastic bag or plastic container and

store in crisper.

- Fish – Use fresh fish the same day as purchased.
- Meat – Store most meat in original wrapping as long as it is airtight and moisture – proof.

Re – wrap if necessary.

- Leftovers – Cover leftovers with plastic wrap or aluminum foil. Plastic containers with tight lids can also be used.

## **Frozen Food Storage**

### **Temperature Control**

When using the refrigerator-freezer for the first time or after defrosting, turn the temperature control to set “MAX” for at least two hours before introducing the food to be stored.

All frozen food products you purchase



should be placed in the freezer compartment as soon as possible to avoid the frozen food from defrosting.

Storage recommendation printed on the packaging of frozen food by the manufacturers should be always be followed.

Be careful that the drawer mustn't mangle the refrigeration pipeline.

## **Freezing Fresh Food**

Ensure that your freezing operations are carried out under the most hygienic conditions as freezing alone does not sterilize the food. It is advisable to freeze

the food by packing it into separate meal portions and not in bulk form. Never put hot or even warm foodstuffs into the freezer compartment. Prior to storing the frozen food, pack it in plastic bags, aluminum sheets or freezing containers and place into the freezer compartment. See the data plate on the back of the refrigerator-freezer for the maximum permissible amount in kilograms of fresh food that can be frozen in any 24 hour period with a room temperature of 25°C. Never freeze more than the maximum permissible.

Note: Never put bottled food or drinks in the freezer compartment.

For best performance, leave enough space in the Freezer compartment for air to circulate around the packages.

### **Cleaning your refrigerator-freezer**

Before you start to clean your refrigerator-freezer remove the mains plug from the power supply.

Use a clean sponge or soft and a mild detergent in warm water. Do not use abrasive or harsh cleaners.

Hand wash, rinse and dry all surfaces thoroughly.

Do not use cleaning waxes, concentrated detergents, bleaches or cleaners containing petroleum on plastics and rubber parts.

Never use paper towels, window sprays, scouring cleansers or flammable fluids on plastic parts as these can scratch or damage material.

Clean with a cloth soaked in this solution and then dry with a soft cloth.

### **PROLONGED OFF PERIODS**

If the refrigerator-freezer is not in use for a long period of time, proceed as

follows:

Disconnect the refrigerator-freezer from the main supply by removing the plug from the wall socket.

Clean and dry the inside as instructed under the heading of cleaning the refrigerator-freezer.

Leave the door open to prevent any unpleasant smells from building up while the refrigerator-freezer is not in use.

## **TROUBLE SHOOTING**

In case of malfunction, you can solve many common problems easily.

### **Your refrigerator-freezer will not operate...Check if**

- The power supply cord is unplugged.

### **The doors will not close completely...Check if**

- The drawers are out of position.
- The gaskets are dirty.
- The refrigerator-freezer is not level.

### **The refrigerator-freezer is noisy when running...Check if**

- Check the refrigerator-freezer is level and it is not in contact with another appliance or kitchen furniture.

### **The refrigerator-freezer does not cool sufficiently...Check if**

- If the door has been opened too often, or it has been left open for a while it will take time for the refrigerator-freezer to reach its set temperature.
- Check the airflow the rear of the refrigerator-freezer has not been reduced due to insufficient clearance.

The following characteristics should not be looked upon as a problem.

- A gentle trickling sound caused by coolant flowing the pipe.

Compressor operating at high temperature.


## Repalcing Your Light Bulb

Note:

All parts removed must be saved to do the replacement of the light bulb.

Before removing the light bulb, either turn off the appliance or disconnect the electricity leading into the appliance at the main power supply. Failure to do so could result in electrical shock or personal injury.

- Unplug the AC power cord from the wall.
- Pull down to remove the lamp cover.
- Unscrew the bulb.
- Repace with a 10-watt bulb that is the same shape and size.

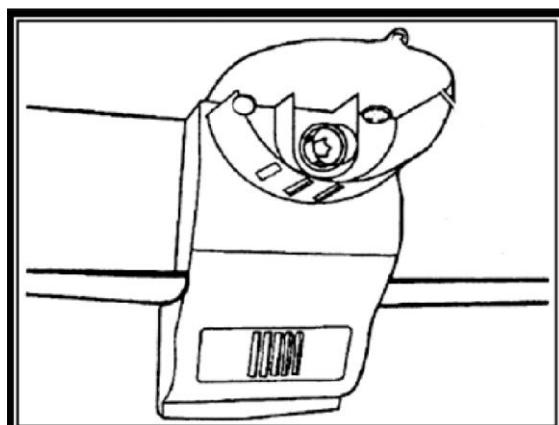


## REQUESTING ASSISTANCE OR SERVICE

If the problem is not due to one of the items listed in Troubleshooting, Contact the dealer or authorized Service Company.

# Changing the Reversible Door


Before reversing the door swing, ensure the appliance is unplugged and empty. Provide additional support for the doors while hinges are being removed. Do not depend on the door magnets to hold the door in place. It is recommended that two people perform this task. DO NOT lay the appliance completely flat as this may damage the coolant system.

## Step 1

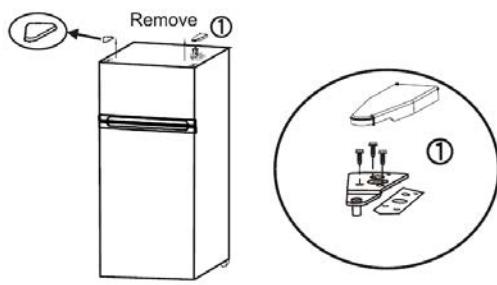


Remove the hinge cover. Unscrew and remove the top hinge.

## Step 2

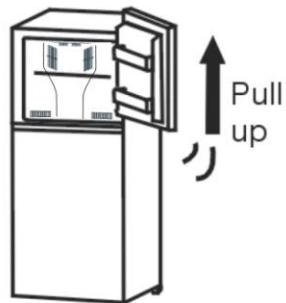


Lift the freezer door up and away from the appliance.

## Step 3

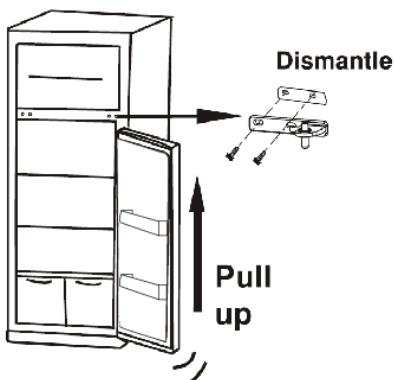


Remove the screws from the middle hinge. Lift the refrigerator door up and away from the appliance.

## Step 4

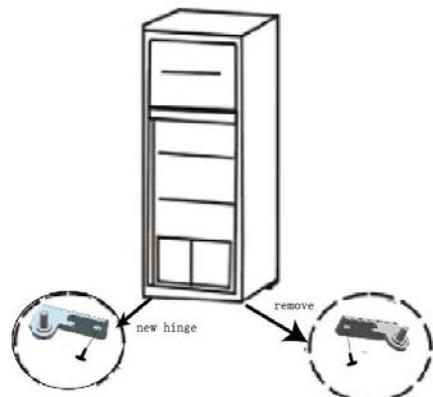


Remove right bottom hinge and reserve the screws. Remove screw covers at left corner and put them into the screw holes at right corner. Install left hinge by using those reserved screws.

## Step 5

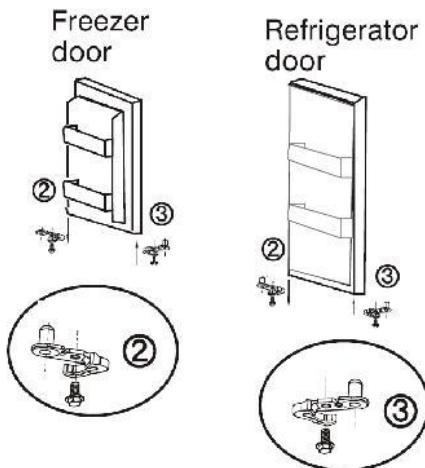

## Step 6

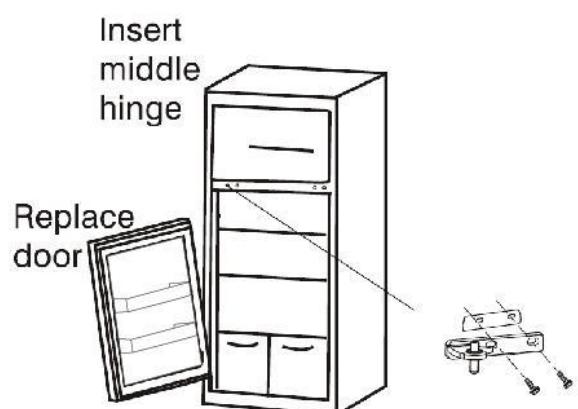

Remove right pin assemblies from the bottom of the freezer and refrigerator doors. On the opposite side, attach the replacement pin assemblies (located in the plastic bag with the Use and Care Manual) with a screwdriver.  
Note: You must re-use the screws from the pin assemblies that are removed in this step when attaching the new assemblies.

Place the refrigerator door on the bottom hinge. Ensure the door is aligned horizontally and vertically. Attach middle hinge to refrigerator door and attach bolt washer to the back of the hinge, then fix them to middle beam and get them fastened with a screwdriver.

## Step 7



Place the freezer door on the middle hinge. Ensure that the door is aligned horizontally and vertically, and that the gasket seals on all sides before attaching the top hinge. Attach the top hinge and replace the hinge cover.

### **WARNING**

#### **RECOMMENDATIONS:**

- 1) WARNING – Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- 2) WARNING – Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- 3) WARNING – Do not damage the refrigerant circuit.
- 4) WARNING – Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

- 5) The appliance has to be unplugged after use and before carrying out user maintenance on the appliance.
- 6) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 7) Children should be supervised to ensure that they do not play with the appliance.
- 8) If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 9) Please abandon the refrigerator-freezer according to local regulators for it use flammable blowing gas and refrigerant.
- 10) Please according to local regulations regarding disposal of the appliance for its flammable refrigerant and blowing gas. Before you scrap the appliance, please take off the doors to prevent children trapped.



### **Correct Disposal of this product:**

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.